


# NEGISHI

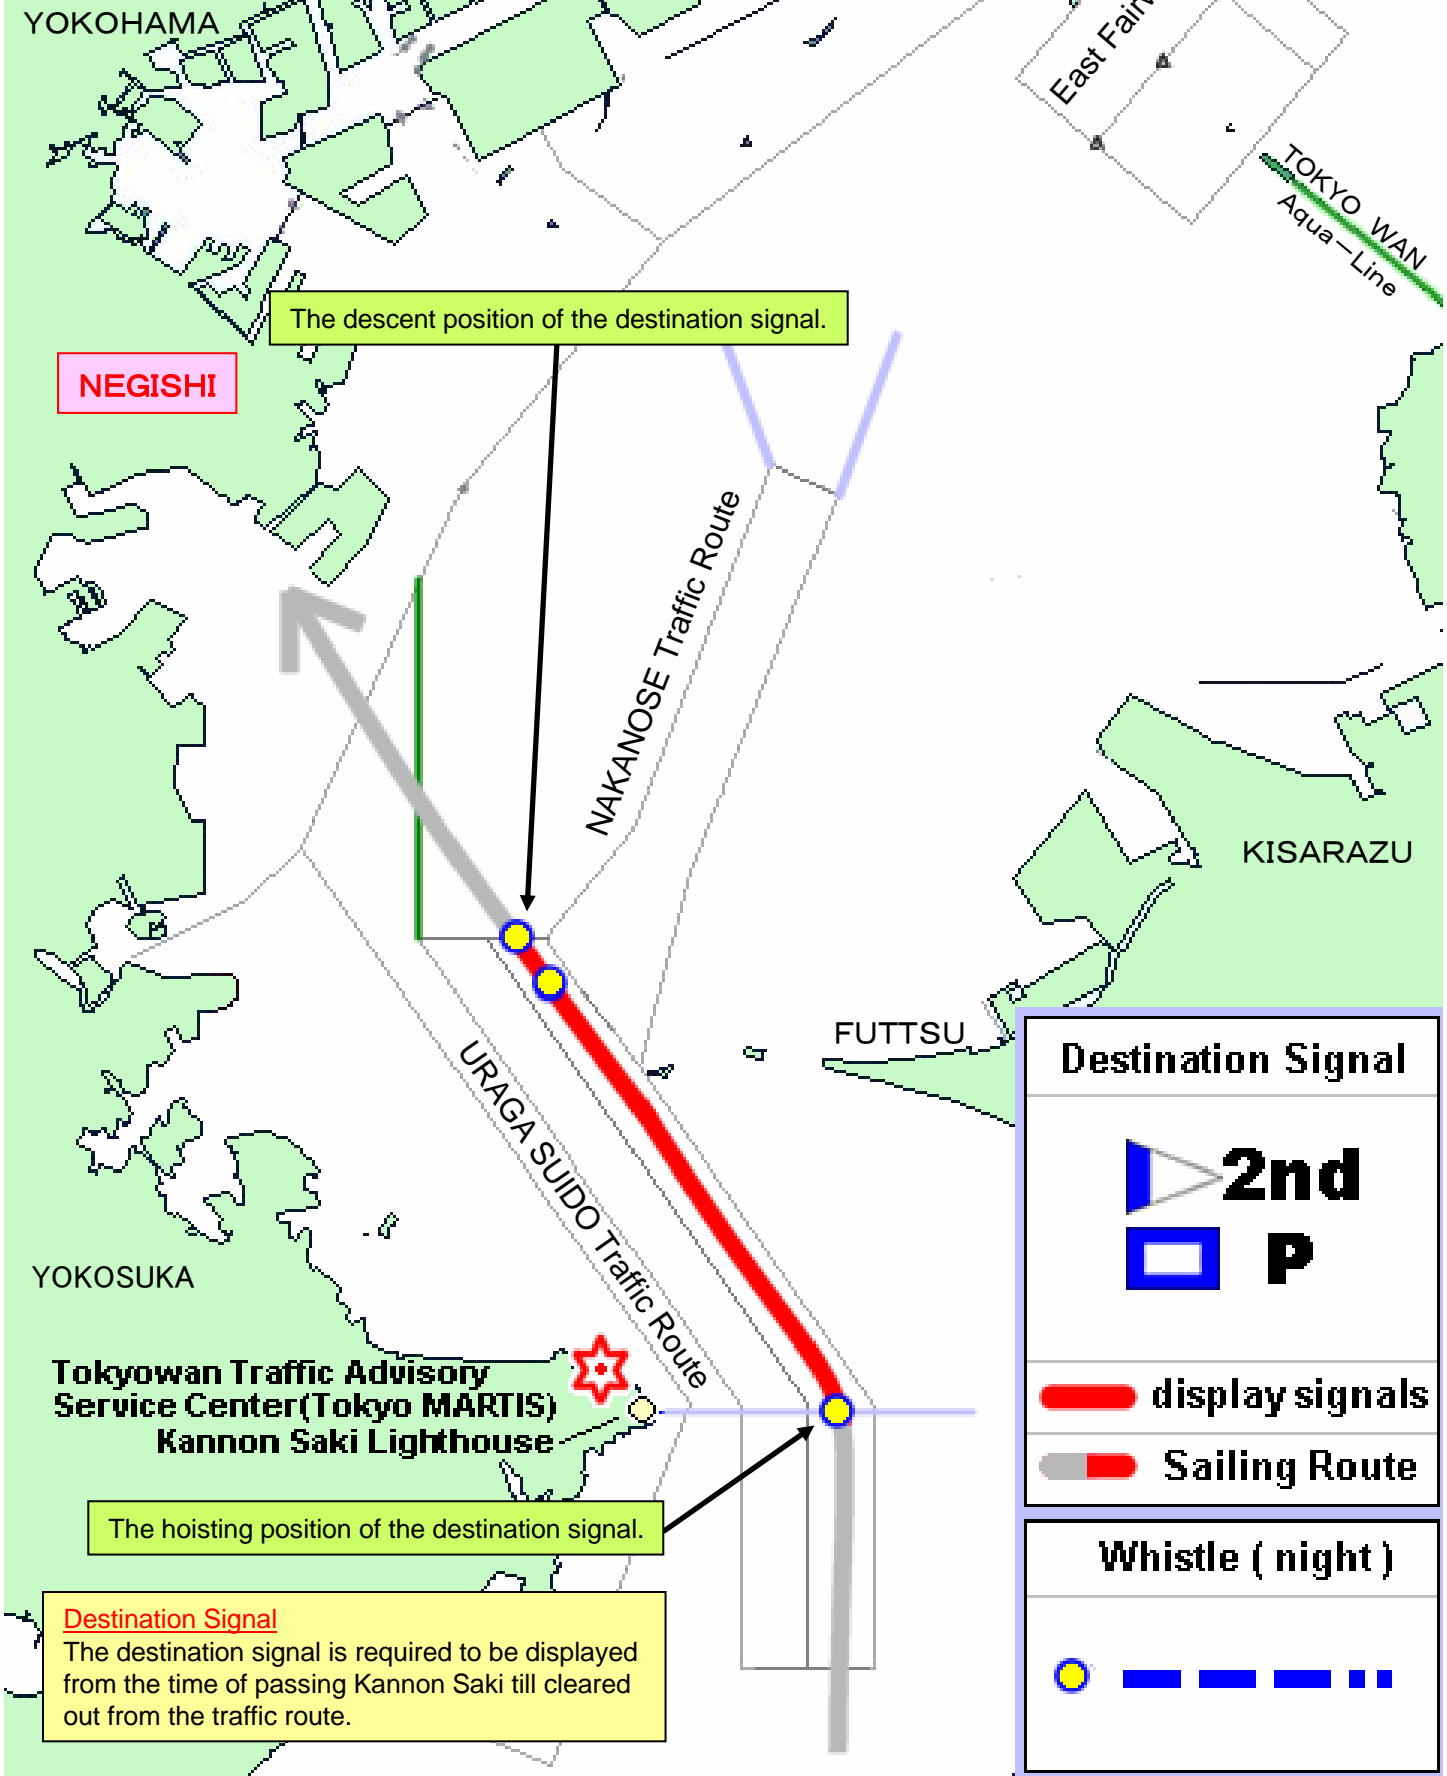

The descent position of the destination signal.

NEGISHI

The hoisting position of the destination signal.

**Destination Signal**  
 The destination signal is required to be displayed from the time of passing Kannon Saki till cleared out from the traffic route.

<b>Destination Signal</b>	
	<b>2nd</b>
	<b>P</b>
	display signals
	Sailing Route
<b>Whistle ( night )</b>	